

ATTACCHI SPECIFICI PER - SPECIFIC FITTING KIT FOR
 KIT DE MONTAGE SPECIFIQUE POUR - SPEZIFISCHER MONTAGEKIT FÜR
 ANLAJE ESPECIFICO PARA

SUZUKI GSR600 2006

ISTRUZIONI DI MONTAGGIO - MOUNTING INSTRUCTIONS
 INSTRUCTIONS DE MONTAGE - BAUANLEITUNG - INSTRUCCIONES DE MONTAJE


1



SUPPORTO
 SUPPORT
 SUPPORT
 HALTERUNG
 SOPORTE

Q.TY n.2(Dx-Sx)


2



VITE TCEI M8x50mm
 SCREW M8x50mm
 VIS M8x50mm
 SCHRAUBE M8x50mm
 TORNILLO M8x50mm

Q.TY n.2


3



VITE TBEI M6x30mm
 SCREW M6x30mm
 VIS M6x30mm
 SCHRAUBE M6x30mm
 TORNILLO M6x30mm

Q.TY n.2

4



VITE TSCEI M6x18mm
 Inox
 SCREW M6x18mm
 VIS M6x18mm
 SCHRAUBE M6x18mm
 TORNILLO M6x18mm

Q.TY n.4

5



GOMMA SAGOMATA
 OGUARN
 RUBBER CUSHION
 CAOUTCHOUC PROFILE
 GEFORMTE GUMMI
 GOMA PROTECTORA

Q.TY n.-

6



GOMMA SAGOMATA
 OGUARN
 RUBBER CUSHION
 CAOUTCHOUC PROFILE
 GEFORMTE GUMMI
 GOMA PROTECTORA

Q.TY n.2

7



RONDELLA
 SVASATA Ø6mm
 300RN
 WASHER Ø6mm
 RONDELLE Ø6mm
 SCHEIBE Ø6mm
 ARANDELA VACIADA Ø6mm

Q.TY n.4

8



RONDELLA IN GOMMA
 Ø6mm
 RUBBER WASHER
 RONDELLE EN CAOUTCHOUC
 GUMMI SCHEIBE
 ARANDELA DE GOMA

Q.TY n.4

9



RONDELLA Ø6mm
 WASHER Ø6mm
 RONDELLE Ø6mm
 SCHEIBE Ø6mm
 ARANDELA Ø6mm

Q.TY n.2

10



DADO CIECO M6
 BOLT M6
 ECROU M6
 MUTTER M6
 TUERCA CIEGA M6

Q.TY n.4

11



RONDELLA Ø6mm
 Inox
 WASHER Ø6mm
 RONDELLE Ø6mm
 SCHEIBE Ø6mm
 ARANDELA Ø6mm

Q.TY n.4

12



RONDELLA Ø8x14mm
 WASHER Ø8x14mm
 RONDELLE Ø8x14mm
 SCHEIBE Ø8x14mm
 ARANDELA Ø8x14mm

Q.TY n.2

13



DISTANZIALE Ø18x14
 ribass Ø13x9mm
 foro 8,5 V526
 SPACER
 ENTRETROISE
 DISTANZSTUECK
 DISTANCIADOR

Q.TY n.2

14





DISTANZIALE Ø14x18
 ribass Ø8,5x3mm
 foro 6,25 V621
 SPACER
 ENTRETROISE
 DISTANZSTUECK
 DISTANCIADOR

Q.TY n.2

15

COMPONENTI ORIGINALI
 ORIGINAL PARTS
 PARTES ORIGINALES
 ORIGINAL BAUTEILE
 COMPONENTES ORIGINALES

Q.TY n.-

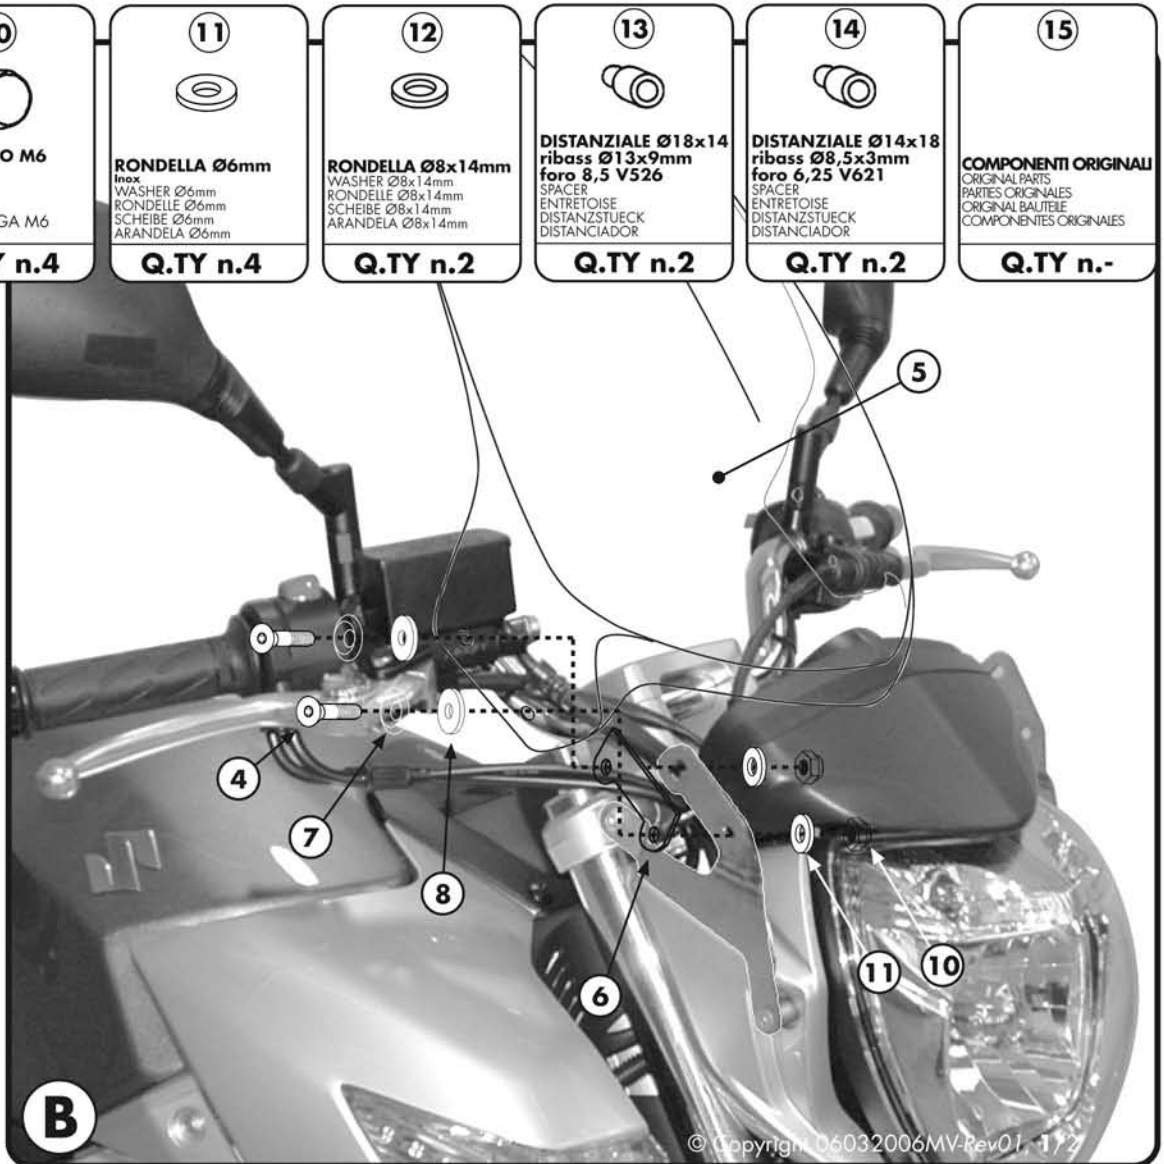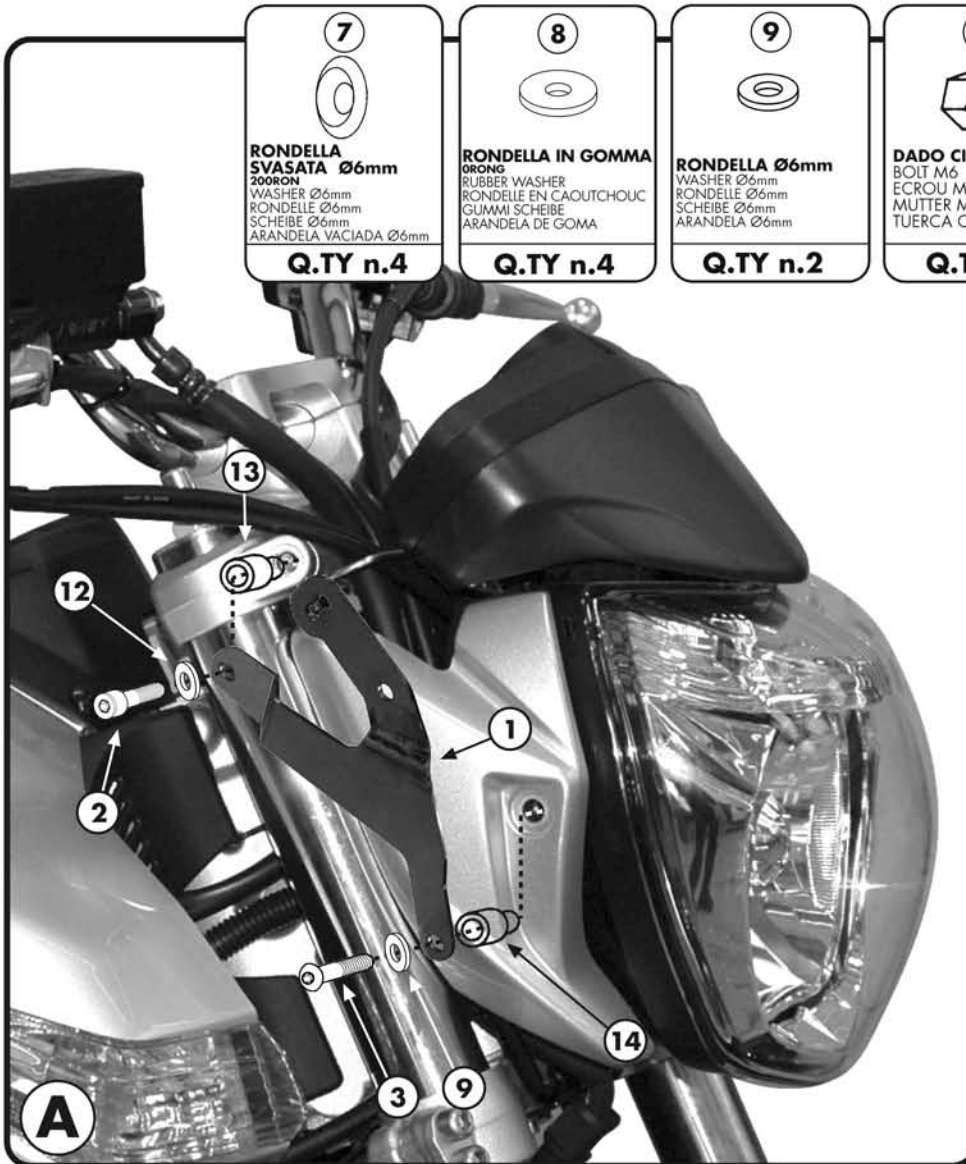

ATTACCHI SPECIFICI PER - SPECIFIC FITTING KIT FOR
KIT DE MONTAGE SPECIFIQUE POUR - SPEZIFISCHER MONTAGEKIT FÜR
ANCLAJE ESPECÍFICO PARA

SUZUKI GSR600 2006

ISTRUZIONI DI MONTAGGIO - MOUNTING INSTRUCTIONS
INSTRUCTIONS DE MONTAGE - BAUANLEITUNG - INSTRUCCIONES DE MONTAJE

I ISTRUZIONI DI MONTAGGIO

1. MONTARE I SUPPORTI N°1 COME INDICATO IN FOTOGRAFIA A;
2. MONTARE IL PLEX N°5 (NON INCLUSO) COME INDICATO IN FOTOGRAFIA B;
3. ULTIMARE IL MONTAGGIO VERIFICANDO CHE TUTTE LE VITI SIANO SERRATE BENE.

GB MOUNTING INSTRUCTIONS

1. MOUNT THE SUPPORTS N1 AS SHOWN IN PICTURE A;
2. MOUNT THE SCREEN N5 (NOT INCLUDED) AS SHOWN IN PICTURE B;
3. LASTLY CHECK THAT ALL SCREWS HAVE BEEN TIGHTENED.

F INSTRUCTIONS DE MONTAGE

1. MONTER LES SUPPORTS N°1 COMME INDIQUE EN PHOTO A;
2. MONTER LE PLEXI N°5 (NON INCLUS) COMME INDIQUE EN PHOTO B;
3. FINIR LE MONTAGE EN CONTROLANT LE BON SERRAGE DE TOUTES LES VIS.

D BAUANLEITUNG

1. MONTIEREN SIE ZUERST DIE HALTERUNGEN NR. 1 WIE IM BILD A BESCHRIEBEN;
2. MONTIEREN SIE DANN DIE SCHEIBE (IST SEPARAT ZU BESTELLEN) WIE IM BILD B BESCHRIEBEN;
3. ZULETZT BERPRUFEN SIE DASS ALLE SCHRAUBEN FESTGEZOGEN WURDEN.

ES

INSTRUCCIONES DE MONTAJE

1. MONTAR EL SOPORTE N°1 TAL Y COMO SE INDICA EN LA FOTOGRAFIA A.
2. MONTAR EL PARABRISAS N°5 (NO INCLUIDO) TAL Y COMO SE MUESTRA EN LA FOTOGRAFIA B;
3. ULTIMAR EL MONTAJE VERIFICANDO QUE TODOS LOS TORNILLOS HAN SIDO BIEN AJUSTADOS.