


PIASTRA SPECIFICA - SPECIFIC PLATE
PLATINE SPECIFIQUE - SPEZIFISCHE PLATTE - PLETINA ESPECÍFICA

BMW R1100RS '96/'00

ISTRUZIONI DI MONTAGGIO - MOUNTING INSTRUCTIONS
INSTRUCTIONS DE MONTAGE - BAUANLEITUNG - INSTRUCCIONES DE MONTAJE

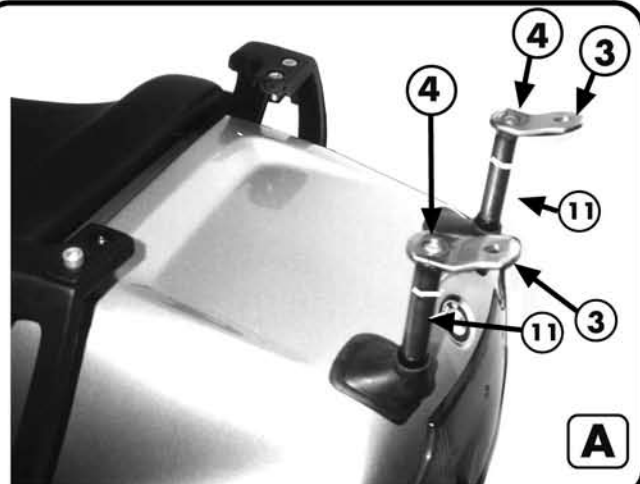

A



VITE ORIGINALE
ORIGINAL SCREW
VIS ORIGINAL

Q.TY n.-



VITE TCEI M 6 X 25
SCREW M 6 X 25
VIS M 6 X 25

Q.TY n.2



VITE TCEI M 6 X 20
SCREW M 6 X 20
VIS M 6 X 20

Q.TY n.2



RONDELLA Ø 6
WASHER Ø 6
RONDELLE Ø 6

Q.TY n.8



PIASTRINA
LITTLE PLATE
PETITE PLAQUE

Q.TY n.4




DADO M 6
NUT M 6
ECROU M 6

Q.TY n.4



DISTANZIALE Ø
14X40 FORO 7
COLLAR DISTANCE
Ø 14X40
COLLIER DE
SEPARATION Ø 14X40

Q.TY n.2

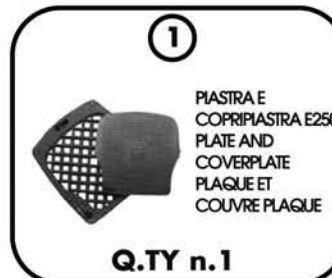

PIASTRA E
COPRPIASTRA E250
PLATE AND
COVERPLATE
PLAQUE ET
COUVRE PLAQUE

Q.TY n.1




SUPPORTO
SUPPORT
SUPPORT

Q.TY n.1



SUPPORTO
SUPPORT
SUPPORT


Q.TY n.2

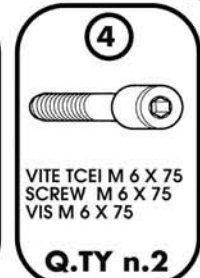

VITE TCEI M 6 X 75
SCREW M 6 X 75
VIS M 6 X 75

Q.TY n.2

-TOGLIERE IL
PORTAPACCHINO
ORIGINALE
-TAKE OFF THE ORIGINAL
LUGGAGE CARRIER
-ENLEVER LE PORTE
PAQUETS ORIGINAL

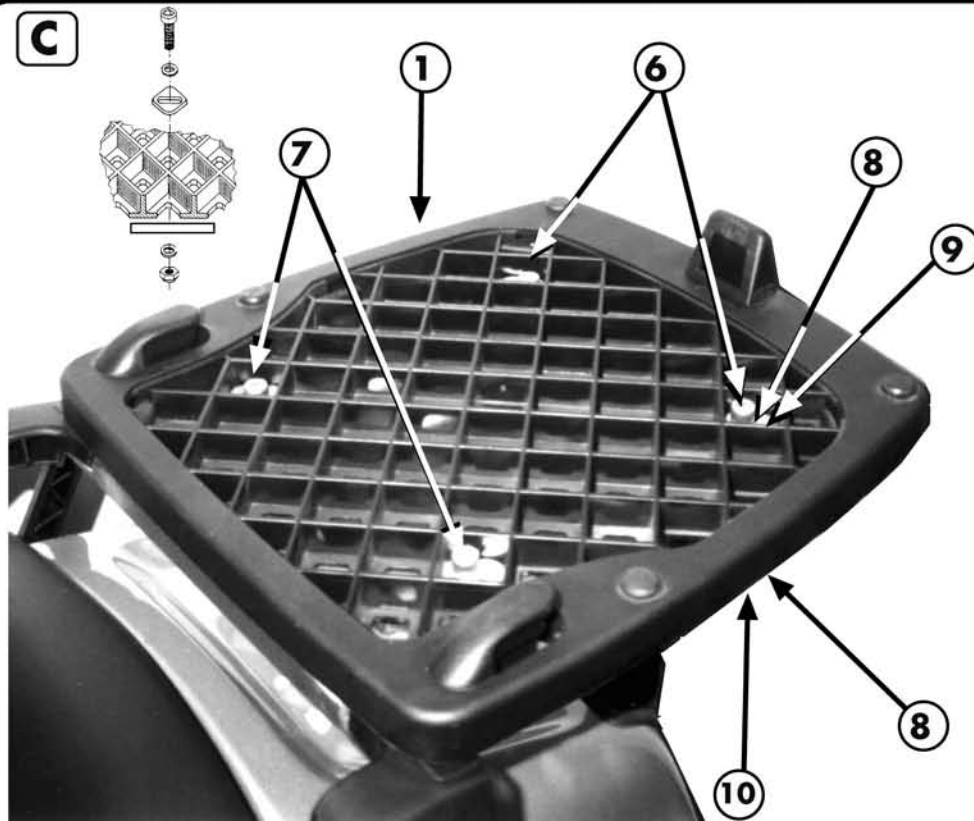

C

B

