





KA200

ISTRUZIONI DI MONTAGGIO / MOUNTING INSTRUCTIONS
 PARABREZZA UNIVERSALE / UNIVERSAL WINDSCREEN
 PARE-BRISE UNIVERSEL / UNIVERSAL WINDSHIELD
 PARABRISAS UNIVERSAL / UNIVERSAL WINDSCREEN
 BAUEINLEITUNG / INSTRUCTIONS DE MONTAGE

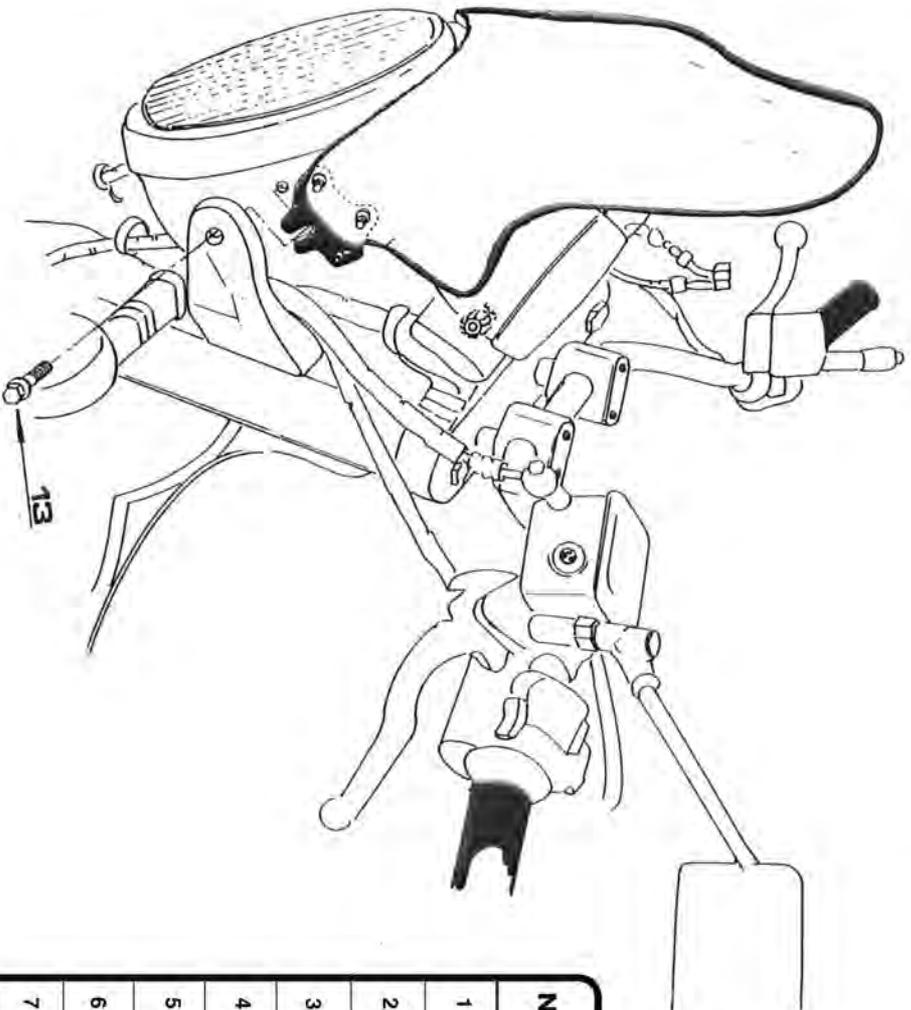

N°	DESCRIZIONE DEL KIT (KIT DESCRIPTION) (BESCHREIBUNG DES BEFESTIGUNGSKIT'S)	QUANTITA' (QUANTITE) (QUANTITÄT)
1	ANSTARS ANSTAR FAKESHISE	1
2	PASTRINA INOX (1dx 1 sx) INOX PLATE PLATINE EN INOX EDELSTAHLPLATE	2
3	GOMMA RUBBER CAOUTCHOUC GUMMI	2
4	RONDELLA Ø 6 IN INOX WASHER Ø 6 RONDELE Ø 6 UNTERLEGSCHIEBE	2
5	RONDELLA SPECIALE SPECIAL WASHER RONDELE SPECIALE SPEZIALUNTERLEGSCHIEBE	4
6	VITE TPCEI M 6 X 18 INOX SCREW M 6 X 18 VIS M 6 X 18	4
7	DADO M 6 AUTOBLOC. RIBAS. inox NUT M 6 ECROU M 6 SCHRAUBENMUTTER	2
8	BUSSOLA INOX Ø 13 X 8 AXLE BOX Ø 13 X 8 RONDELE SPECIALE DE SEPARATION Ø 13 X 8 EDELSTAHLBUCHSE Ø 13 X 8	2
9	VITE TCEI M 6 X 10 INOX SCREW M 6 X 10 VIS M 6 X 10 SCHRAUBE M 6 X 10	2
10	TAPPO COPRIVITE NERO COVER SCREW CAP BOUCHON COUVRE VIS SCHRAUBENSTOPSEL	2
11	RONDELLA IN GOMMA Ø16 FORO 6 RUBBER WASHER Ø 16 RONDELE EN CAOUTCHOUC	4
12	DADO M6 CIECO INOX BLIND NUT M 6 NUT AVEUGLE M 6 BLINDMUTTER	4
13	VITE ORIGINALE ORIGINAL SCREW VIS ORIGINALE ORIGINALE SCHRAUBE	-
14	RONDELLA Ø6x16 IN INOX WASHER Ø6x16 RONDELE UNTERLEGSCHIEBE	4

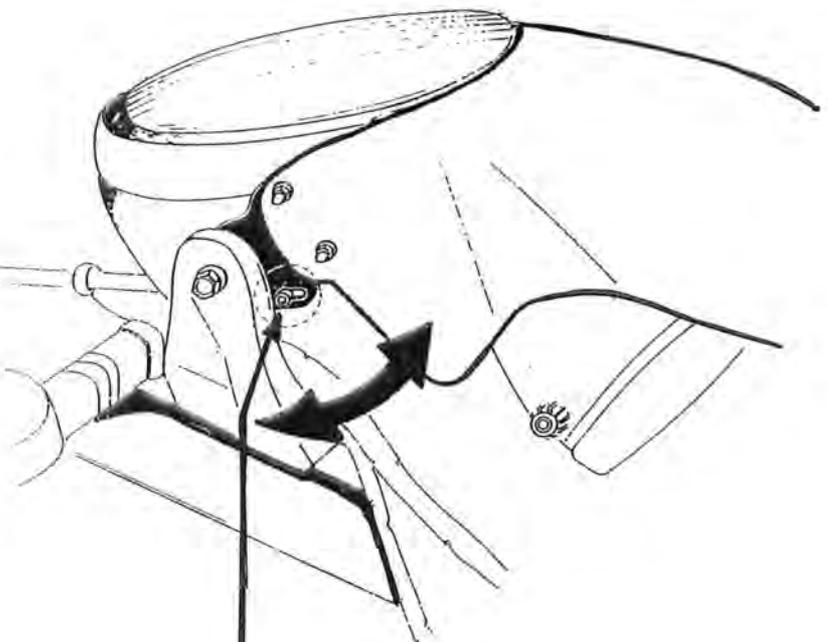

- VITE BLOCCAGGIO
INCLINAZIONE
- INCLINATION
BLOCKING SCREW
- VIS POUR LE BLOCAGE
DE L'INCLINAISON
- SCHRAUBE ZUR EINSTELLUNG
DES NEIGUNGSWINKELS



KA200

PARABREZZA UNIVERSALE
UNIVERSAL WINDSCREEN
PAR-BRISE UNIVERSEL
UNIVERSEL WINDSHILDE
PARABRISAS UNIVERSAL

ISTRUZIONI DI MONTAGGIO - MOUNTING INSTRUCTIONS
INSTRUCTIONS DE MONTAGE
BAUENLEITUNG - ISTRUCCIONES DE MONTAJE

