


HONDA HORNET 600 2005

ISTRUZIONI DI MONTAGGIO - MOUNTING INSTRUCTIONS
INSTRUCIONS DE MONTAGE - BAUANLEITUNG - INSTRUCCIONES DE MONTAJE




Q.TY n1

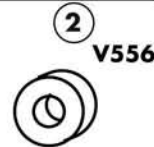


DISTANZIALE
SPACER
ENTRETOISE
DISTANZSTUECK
DISTANCIADOR

Q.TY n.4




VITE TSCEI M6x30mm
INOX
SCREW M6x30mm
VIS M6x30mm
SCHRAUBE M6x30mm
TORNILLO M6x30mm

Q.TY n.4

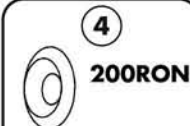


RONDELLA
SVASATA Ø6mm
WASHER Ø6mm
RONDELLE Ø6mm
SCHEIBE Ø6mm
ARANDELA VACIADA Ø6mm

Q.TY n.4



RONDELLA IN GOMMA
RUBBER WASHER
RONDELLE EN GOMME
GUMMISCHEIBE
ARANDELA DE GOMA

Q.TY n.8

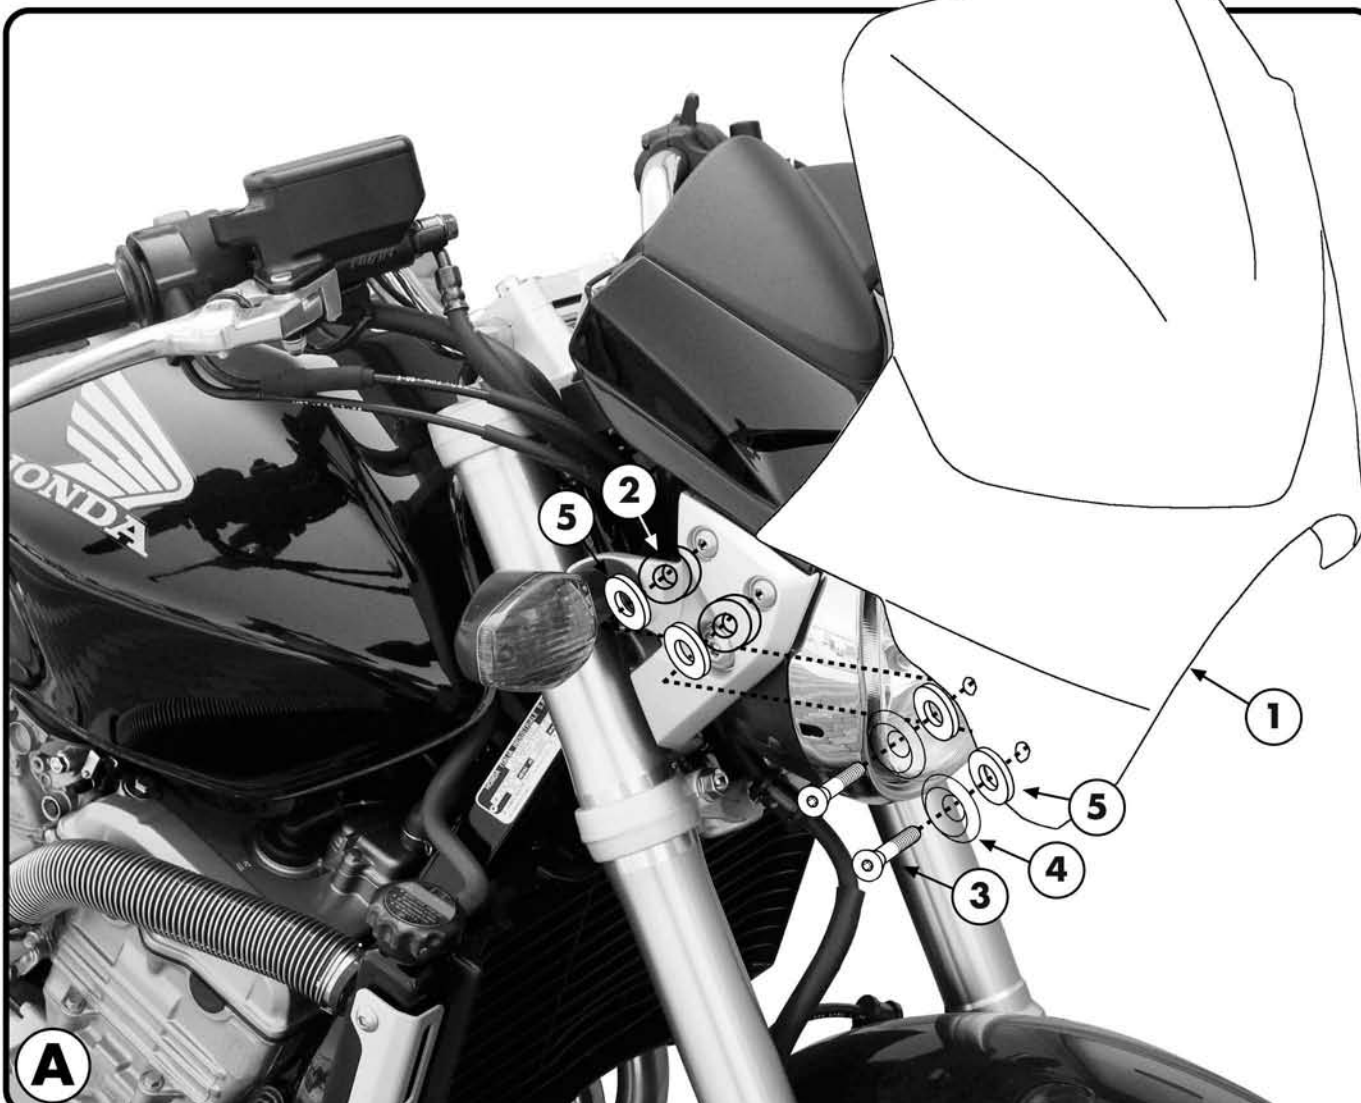

SVITARE LE DUE VITI ORIGINALI CHE BLOCCANO LA MODANATURA. ESEGUIRE IL MONTAGGIO PROPOSTO IN FIGURA A.

UNSCREW THE TWO ORIGINAL SCREWS THAT FIX THE FAIRING.
PROCEED WITH THE MOUNTING SUGGESTED IN PICTURE A.

DESTORNILLAR LOS DOS TORNILLOS ORIGINALES QUE ANCLAN AL SOPORTE ORIGINAL EJECUTAR EL MONTAJE COMO INDICA LA FOTO A

DEVISSER LES DEUX VIS QUI TIENNENT LE DEFLECTEUR.
EXECUTER LE MONTAGE PROPOSE SUR LA PHOTO A.

LÖSEN SIE DIE ORIGINAL SCHRAUBEN, DIE AN DER SCHEIBENVERKLEIDUNG BEFESTIGT SIND. FOLGEN SIE DER MONTAGE VOM BILD A.

A