

SCHIENALINO SPECIFICO - SPÉCIAL BACKREST - DOSSERET SPÉCIFIQUE
SPEZIFISCHE BEIFAHRE-RÜCKENLEHNE - RESPALDO ESPECÍFICO

HONDA SILVER WING '01/'03

600cc

ISTRUZIONI DI MONTAGGIO - MOUNTING INSTRUCTIONS
INSTRUCTIONS DE MONTAGE - BAUANLEITUNG - ISTRUCCIONES DE MONTAJE



Q.TY n.1



GOMMA
GUM PROTECTOR
CAOUTCHOUC DEC.
GUMMI
GOMA DE PROTECC.

Q.TY n.1



VITE TBEI M8x30
SCREW M8x30
VIS M8x30
SCHRAUBE M8x30
TORNILLO M8x30

Q.TY n.2




VITE TBEI M8x35
SCREW M8x35
VIS M8x35
SCHRAUBE M8x35
TORNILLO M8x35

Q.TY n.2



RONDELLA 8X14
WASHER
RONDELLE
SCHEIBE
ARANDELA

Q.TY n.4

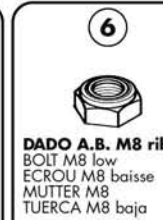

DADO A.B. M8 ribass
BOLT M8 low
ECROU M8 basse
MUTTER M8
TUERCA M8 baja

Q.TY n.2

SMONTARE
TO DISMOUNT
DEMONTER
ABMONTIEREN - DESMONTAR

