

PARACOPPA SPECIFICO - OIL CARTER PROTECTION
SABOT MOTEUR SPECIFIQUE - SPEZIFISCHER MOTORSCHULTZ - CUBRE CARTER ESPECIFICO

SUZUKI DL650 V-STROM L2

2011 - 2012

ISTRUZIONI DI MONTAGGIO - MOUNTING INSTRUCTIONS
INSTRUCTIONS DE MONTAGE - BAUANLEITUNG - INSTRUCCIONES DE MONTAJE

1



PARACOPPA
OIL CARTER PROTECTION
SABOT MOTEUR
SPEZIFISCHER MOTORSCHULTZ
CUBRE CARTER

Q.TY n.1

2



PIASTRINA
LITTLE PLATE
PETITE PLAQUE
PLAETTCHEN
PLAQUETA

GL2137

Q.TY n.1

3



PIASTRINA
LITTLE PLATE
PETITE PLAQUE
PLAETTCHEN
PLAQUETA

GL2139

Q.TY n.1

4



PIASTRINA CENTRALE
CENTRAL LITTLE PLATE
PETITE PLAQUE CENTRALE
ZENTRUM PLAETTCHEN
PLAQUETA CENTRAL

GL2138

Q.TY n.1

5



VITE TEF M6x16 mm
SCREW
VIS
SCHRAUBE
TORNILLO

Q.TY n.2

6



VITE TBEI M6x25 mm
SCREW
VIS
SCHRAUBE
TORNILLO

Q.TY n.2

7



VITE TE M10x120 mm
SCREW M10x120mm
VIS M10x120mm
SCHRAUBE M10x120mm
TORNILLO M10x120mm

Q.TY n.1

8



VITE TBEFN M6x16
SCREW
VIS
SCHRAUBE
TORNILLO

Q.TY n.4

9



RONDELLA Ø6x18 nera
WASHER Ø6x18 black
RONDELLE Ø6x18 noire
SCHEIBE Ø6x18 schwarz
ARANDELA Ø6x18 negra

Q.TY n.2

10



RONDELLA Ø10 mm
WASHER Ø10mm
RONDELLE Ø10mm
SCHEIBE Ø10mm
ARANDELA Ø10mm

Q.TY n.2

11



RONDELLA
ZIGRINATA Ø6
WASHER Ø6
RONDELLE Ø6
SCHEIBE Ø6
ARANDELA Ø6

Q.TY n.4

12



DADO A.B. M6
FLANGIATO
BOLT M6
ECROU M6
MUTTER M6
TUERCA M6

Q.TY n.2

14



DADO A.B. M10
BOLT M10
ECROU M10
MUTTER M10
TUERCA M10

Q.TY n.1



13



V044

DISTANZIALE Ø10x9.8mm
foro Ø8,2mm
SPACER
ENTRETOISE
DISTANZSTUECK
DISTANCIADOR

Q.TY n.2

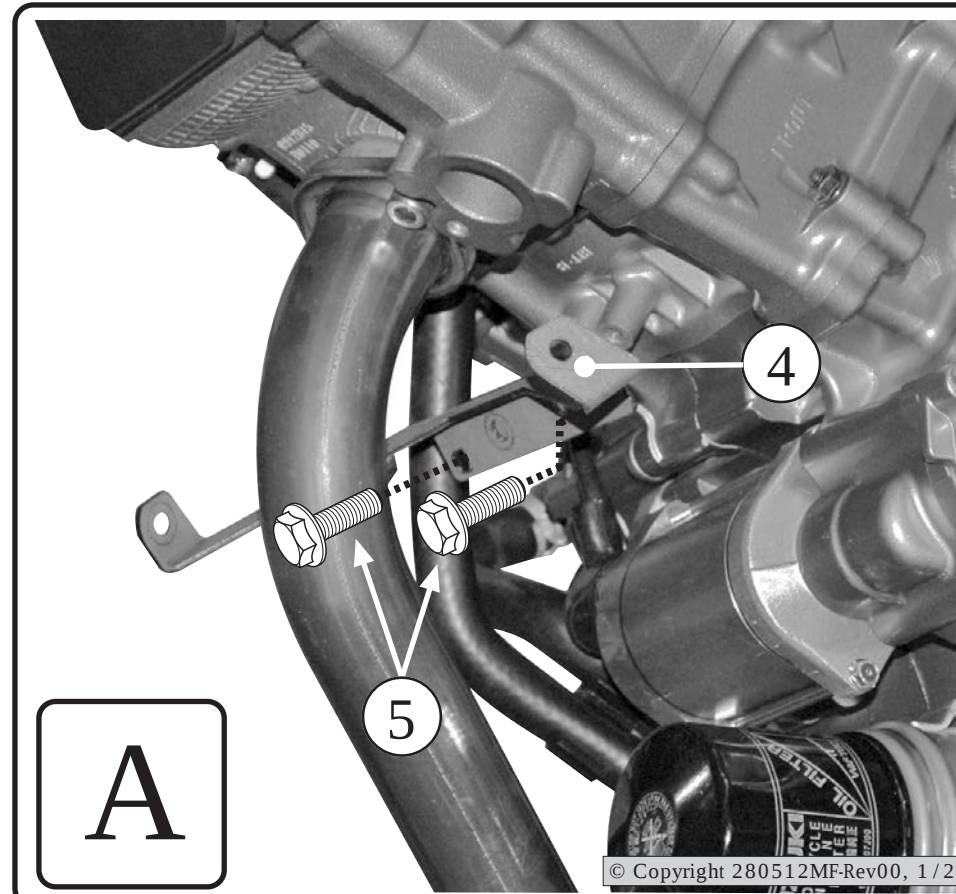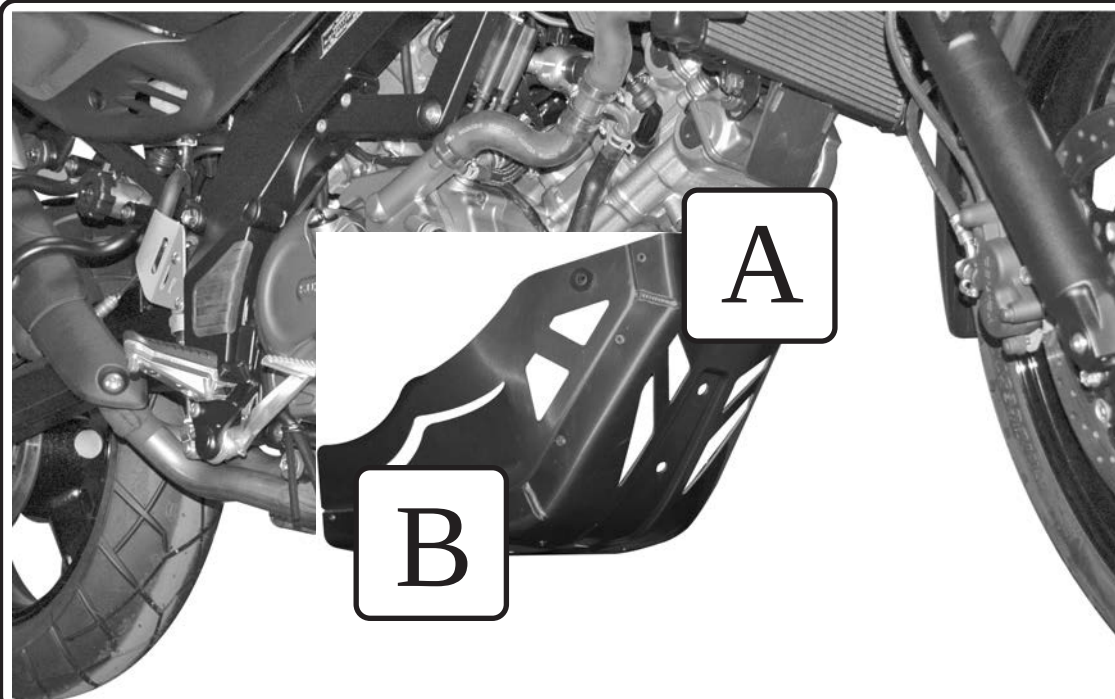

PARACOPPA SPECIFICO - OIL CARTER PROTECTION
SABOT MOTEUR SPECIFIQUE - SPEZIFISCHER MOTORSCHULTZ - CUBRE CARTER ESPECIFICO

SUZUKI DL650 V-STROM L2

2011 - 2012

ISTRUZIONI DI MONTAGGIO - MOUNTING INSTRUCTIONS
INSTRUCTIONS DE MONTAGE - BAUANLEITUNG - INSTRUCCIONES DE MONTAJE

