
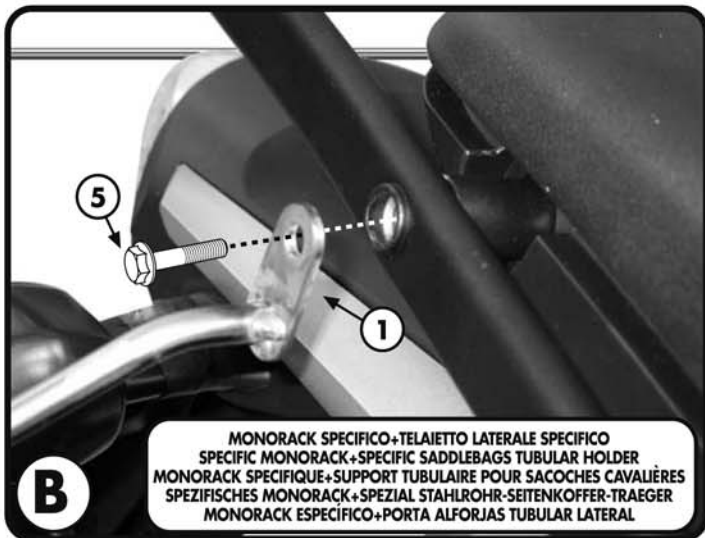
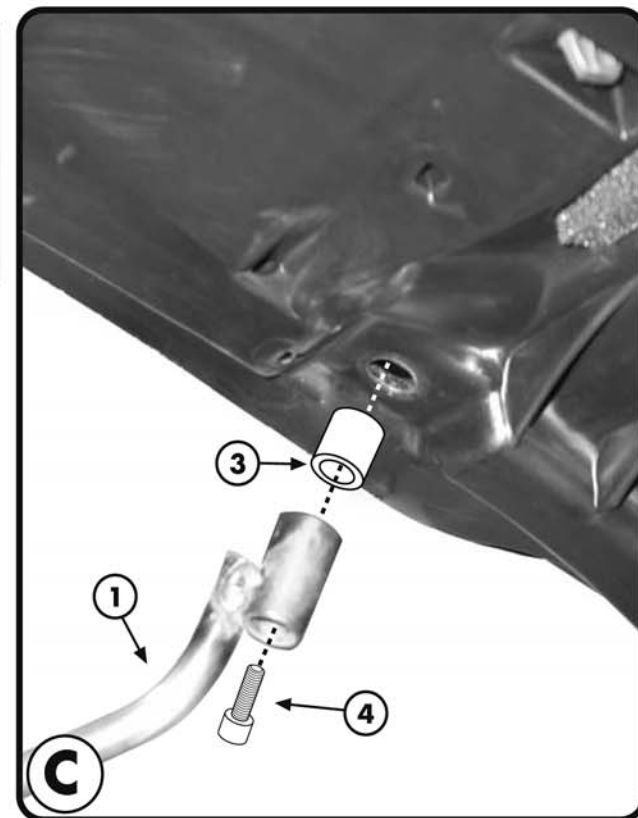


TELAJETTO LATERALE SPECIFICO - SPECIFIC SADDLEBAG TUBULAR HOLDER
 SUPPORT TUBULAIRE POUR SACOCHES CAVALIÈRES - SPEZIAL SEITENTRÄGER FUER WEICHTASCHEN
 PORTA ALFORJAS TUBULAR LATERAL

HONDA HORNET 600 2007

ISTRUZIONI DI MONTAGGIO - MOUNTING INSTRUCTIONS
 INSTRUCTIONS DE MONTAGE - BAUANLEITUNG - INSTRUCCIONES DE MONTAJE

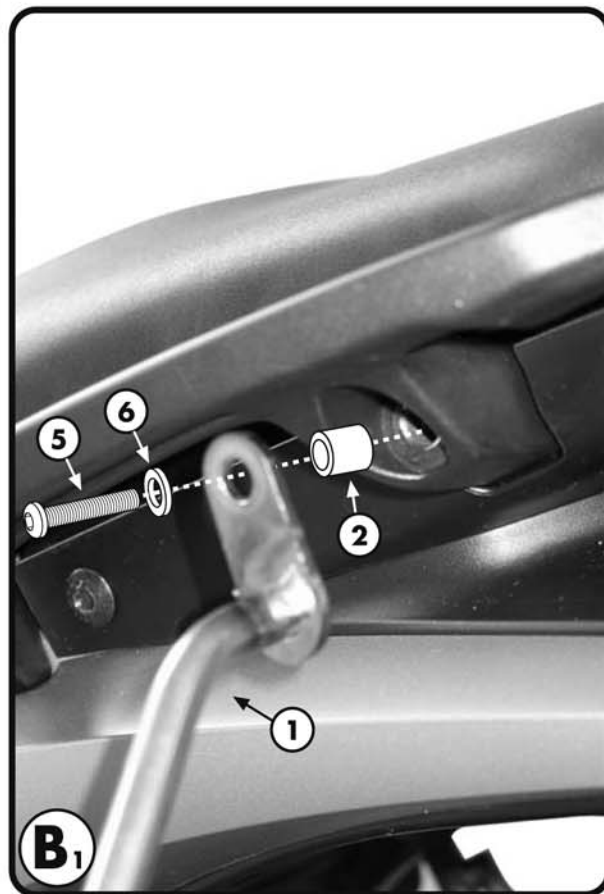

TELAJETTO LATERALE SPECIFICO - SPECIFIC SADDLEBAG TUBULAR HOLDER
SUPPORT TUBULAIRE POUR SACOCHES CAVALIERES - SPEZIAL SEITENTRAEGER FUER WEICHTASCHEN
PORTA ALFORJAS TUBULAR LATERAL

HONDA HORNET 600 2007

ISTRUZIONI DI MONTAGGIO - MOUNTING INSTRUCTIONS
INSTRUCTIONS DE MONTAGE - BAUANLEITUNG - INSTRUCCIONES DE MONTAJE

I ISTRUZIONI DI MONTAGGIO

- FISSARE IL TELAIETTO AL MONORACK COME INDICATO IN FIGURA "B" O AL MANIGLIONE DELLA MOTO NEL CASO IN CUI NON SIA PRESENTE IL MONORACK (FIG "B1").
SEGUIRE IL MONTAGGIO PROPOSTO IN FIGURA "C".
CONTROLLARE CHE TUTTE LE VITI SIANO SERRATE BENE.

GB MOUNTING INSTRUCTIONS

1. FIX THE TUBULAR HOLDER AS INDICATED IN PICTURE B OR TO THE GRABRAIL IN CASE THE MONORACK HASN'T BEEN MOUNTED (PIC. B1);
2. FOLLOWING THE MOUNTING SUGGESTED IN PICTURE C;
3. LASTLY CHECK THAT ALL SCREWS HAVE BEEN TIGHTENED.

F INSTRUCTIONS DE MONTAGE

1. FIXER LES SUPPORTS SACOCHES CAVALIERES AU MONORACK COMME INDIQUE EN PHOTO "B" OU AUX POIGNEES DE LA MOTO DANS LE CAS OU IL N'Y A PAS DE MONORACK (FIG. «B1»).
2. EXECUTER LE MONTAGE PROPOSE EN PHOTO « C ».
3. CONTROLER LE BON SERRAGE DE TOUTES LES VIS.

D BAUANLEITUNG

1. BEFESTIGEN SIE DEN ABSTANDSHALTER WIE IM BILD B BESCHRIEBEN ODER AN DEN HANDGRIFFEN FALLS DAS MONORACK NICHT MONTIERT WURDE (BILD B1)
2. FOLGEN SIE DEN MONTAGESCHRITTEN WIE IM BILD C BESCHRIEBEN;
3. ZULETZT ÜBERPRÜFEN SIE, DASS ALLE SCHRAUBEN FESTGEZOGEN WURDEN.

ES

INSTRUCCIONES DE MONTAJE

- FIJAR EL PEQUEÑO TELAR AL MONORACK COMO INDICADO EN FOTOGRAFIA B Y ON TIRADOR DE LA MOTO EN EL CASO EN QUE NO SEA PRESENTE EL MONORACK (FIGURA "B1")
- SEGUIR CON EL MONTAJE PROPUESTO EN FOTOGRAFIA C
- CONTROLAR QUE LOS TORNILLOS ESTÉN BIEN AJUSTADOS