


# SHAD

## HONDA CROSSRUNNER VFR 800X '15

HOCR85IF



**1** 261839 x1 →  
261840 x1 ←




**2** 261460 x2  
Ø18 Ø11 x 45



**3** 304170 x4  
M8 x 60  
Din 7380



**4** 303045 x4  
Ø8

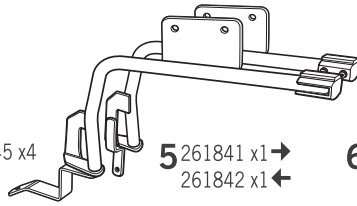

**5** 261841 x1 →  
261842 x1 ←



**6** 304088 x2  
M8 x 35  
Din 7991



**7** 304028 x4  
M8 x 25  
Din 7380



**8** 303020 x10  
Ø8



**9** 302024 x6  
M8

### ! WARNING!

**(GB)**

Do not fully tighten the screws until it is ensured that the KIT is correctly attached and aligned.

**(E)**

No apretar los tornillos del todo hasta asegurarse que el KIT está correctamente colocado y alineado.

**(D)**

Ziehen Sie die Schrauben nicht ganz fest, bevor Sie sich nicht vergewissert haben, daß der Bausatz korrekt eingestellt und ausgerichtet ist.

**(I)**

Non stringere del tutto le viti fin tanto non si è sicuri che il kit è collocato correttamente e allineato.

**(F)**

Ne pas serrer les vis avant d'être sûr que le KIT est correctement monté et ajusté.

