


SHAD


YAMAHA XJ 600 '09
YOXJ69IF

3P
SYSTEM

DESIGNED IN
BARCELONA

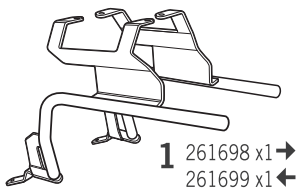

1 261698 x1 →
261699 x1 ←



2 261693 x2



3 202478 x2



4 261672 x4
Ø18 Ø12 Ø7 x 7,5-2



5 304079 x4
M6 x 30 Din 7380



6 303000 x4
Ø6



7 304170 x2
M8 x 60 Din 7380



8 303020 x12
Ø8



9 302024 x4
Ø8



10 303018 x4
Ø8



11 304039 x4
M8 x 40 Din 7380



12 260918 x4



13 260695 x4

! WARNING!

(GB)

Do not fully tighten the screws until it is ensured that the KIT is correctly attached and aligned.

(E)

No apretar los tornillos del todo hasta asegurarse que el KIT está correctamente colocado y alineado.

(D)

Ziehen Sie die Schrauben nicht ganz fest, bevor Sie sich nicht vergewissert haben, daß der Bausatz korrekt eingestellt und ausgerichtet ist.

(I)

Non stringere del tutto le viti fin tanto non si è sicuri che il kit è collocato correttamente e allineato.

(F)

Ne pas serrer les vis avant d'être sûr que le KIT est correctement monté et ajusté.

